

Table of switching MIDI channels for the DS-4M ProMuzer & CUSTOM

				CHANNEL 1
				Ch.1-1, Ch.2-2, Ch.3-3, Ch.4-4
				CHANNEL 2
				Ch.1-2, Ch.2-3, Ch.3-4, Ch.4-5
				CHANNEL 3
				Ch.1-3, Ch.2-4, Ch.3-5, Ch.4-6
				CHANNEL 4
				Ch.1-4, Ch.2-5, Ch.3-6, Ch.4-7
				CHANNEL 5
				Ch.1-5, Ch.2-6, Ch.3-7, Ch.4-8
				CHANNEL 6
				Ch.1-6, Ch.2-7, Ch.3-8, Ch.4-9
				CHANNEL 7
				Ch.1-7, Ch.2-8, Ch.3-9, Ch.4-10
				CHANNEL 8
				Ch.1-8, Ch.2-9, Ch.3-10, Ch.4-11
				CHANNEL 9
				Ch.1-9, Ch.2-10, Ch.3-11, Ch.4-12
				CHANNEL 10
				Ch.1-10, Ch.2-11, Ch.3-12, Ch.4-13
				CHANNEL 11
				Ch.1-11, Ch.2-12, Ch.3-13, Ch.4-14
				CHANNEL 12
				Ch.1-12, Ch.2-13, Ch.3-14, Ch.4-15
				CHANNEL 13
				Ch.1-13, Ch.2-14, Ch.3-15, Ch.4-16
				CHANNEL 14
				Common Mode
				CHANNEL 15
				Polyphonic Mode
				CHANNEL 16
				CC Pitch Mode